



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date:

Pattern Type:

Pattern Difficulty:

Pattern Designer:

Pattern Volume (ml):

Pattern Parameters

Pattern Number:

Pattern Name:

Mode:

Forward Speed:

Start Cleaner Spray:

Start Squeegee:

Start Oiling:

Split Pattern:

Supplies Information

Lane Cleaner:

Cleaner Mixture Ratio:

Cleaner Transition Distance: Authority22

Cleaner Spray End Distance: Envoy

Lane Conditioner:

Surface Information

Surface Type:


Surface Brand:

Age:

Notes:

	Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
Zone End Distance	<input type="text" value="10"/>	<input type="text" value="19"/>	<input type="text" value="26"/>	<input type="text" value="32"/>	<input type="text" value="39"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
Zone Ratio	L <input type="text" value="4.2 : 1"/>	<input type="text" value="4.6 : 1"/>	<input type="text" value="5.1 : 1"/>	<input type="text" value="4.7 : 1"/>	<input type="text" value="1.0 : 1"/>	<input type="text" value="### : 1"/>	<input type="text" value="### : 1"/>	<input type="text" value="### : 1"/>
	R <input type="text" value="4.2 : 1"/>	<input type="text" value="4.6 : 1"/>	<input type="text" value="5.1 : 1"/>	<input type="text" value="4.7 : 1"/>	<input type="text" value="1.0 : 1"/>	<input type="text" value="### : 1"/>	<input type="text" value="### : 1"/>	<input type="text" value="### : 1"/>
Zone Volume (ml)	<input type="text" value="8.38"/>	<input type="text" value="5.66"/>	<input type="text" value="3.56"/>	<input type="text" value="2.18"/>	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>

ZONE	7 Pin Side																	Board Number												10 Pin Side									
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	10	10	10	20	20	20	35	35	50	50	50	70	70	70	85	85	85	90	90	90	90	90	85	85	85	70	70	70	50	50	50	35	35	20	20	20	10	10	10
2	5	5	5	15	15	15	25	25	40	40	40	55	55	55	60	60	60	70	70	70	70	60	60	60	55	55	55	40	40	40	25	25	15	15	15	5	5	5	
3	3	3	3	10	10	10	20	20	35	35	35	45	45	45	50	50	50	55	55	55	55	50	50	50	45	45	45	35	35	35	20	20	10	10	10	3	3	3	
4	3	3	3	8	8	8	15	15	25	25	25	30	30	30	35	35	35	40	40	40	40	40	35	35	35	30	30	30	25	25	25	15	15	8	8	8	3	3	3
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
6																																							
7																																							
8																																							

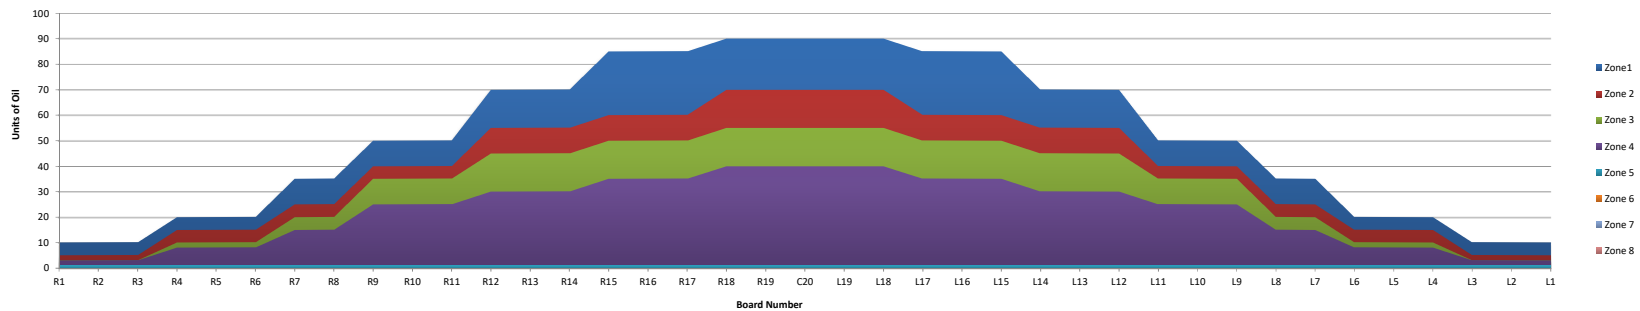

0


Crosswise Ratios (by units)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 21.0	4.2	3L-7L	Left = 1.0	1.0		
3R-7R	Right = 21.0	4.2	3R-7R	Right = 1.0	1.0		
18L-18R	Center = 90.0		18L-18R	Center = 1.0			
Zone 2				Zone 6			
3L-7L	Left = 15.0	4.6	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right = 15.0	4.6	3R-7R	Right = #DIV/0!	#DIV/0!		
18L-18R	Center = 70.0		18L-18R	Center = #DIV/0!			
Zone 3				Zone 7			
3L-7L	Left = 10.6	5.1	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right = 10.6	5.1	3R-7R	Right = #DIV/0!	#DIV/0!		
18L-18R	Center = 55.0		18L-18R	Center = #DIV/0!			
Zone 4				Zone 8			
3L-7L	Left = 8.4	4.7	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right = 8.4	4.7	3R-7R	Right = #DIV/0!	#DIV/0!		
18L-18R	Center = 40.0		18L-18R	Center = #DIV/0!			

Crosswise Ratios (by ml)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0.088	4.2	3L-7L	Left = 0.000	#DIV/0!		
3R-7R	Right = 0.088	4.2	3R-7R	Right = 0.000	#DIV/0!		
18L-18R	Center = 0.377		18L-18R	Center = 0.000			
Zone 2				Zone 6			
3L-7L	Left = 0.057	4.6	3L-7L	Left = 0.000	#DIV/0!		
3R-7R	Right = 0.057	4.6	3R-7R	Right = 0.000	#DIV/0!		
18L-18R	Center = 0.264		18L-18R	Center = 0.000			
Zone 3				Zone 7			
3L-7L	Left = 0.031	5.1	3L-7L	Left = 0.000	#DIV/0!		
3R-7R	Right = 0.031	5.1	3R-7R	Right = 0.000	#DIV/0!		
18L-18R	Center = 0.161		18L-18R	Center = 0.000			
Zone 4				Zone 8			
3L-7L	Left = 0.021	4.7	3L-7L	Left = 0.000	#DIV/0!		
3R-7R	Right = 0.021	4.7	3R-7R	Right = 0.000	#DIV/0!		
18L-18R	Center = 0.101		18L-18R	Center = 0.000			

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

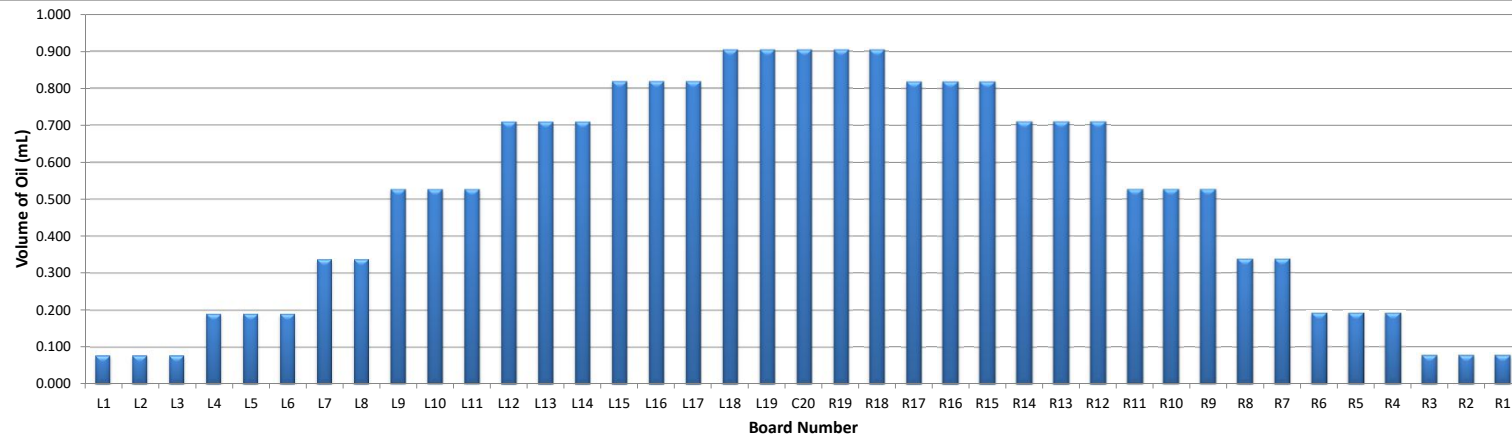

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
4.59	1	4.59

